


KitLock 1000

PROGRAMMING INSTRUCTIONS

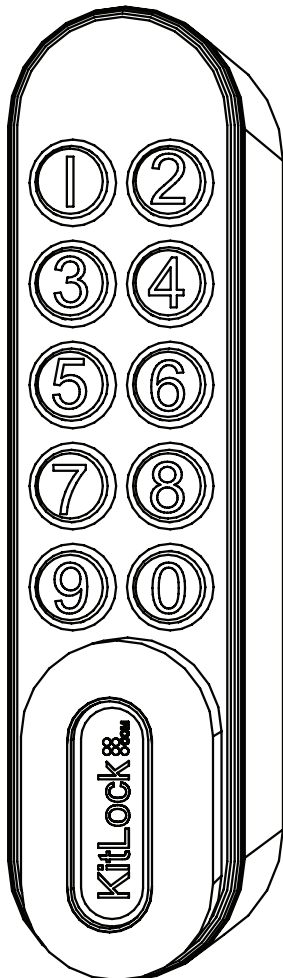

three h

CODES - THE BASICS

The KitLock has four code levels available

- Master Code
- Sub-Master Code
- User Code
- Technician Code

The KitLock is supplied with two factory set codes

- Master Code: 11335577
- User Code: 2244

When Fitted

- Immediately change the Master & User Codes

Code Digits

- Master & Sub-Master Codes: 8 digits
- User Codes: 4 digits
- Technician Codes: 6 digits

Open Time

- The lock 'open' time is set at 4 seconds

Functions

Before programming, select the most appropriate function for the application:

A) or B) see Special Master Code Commands.

A) Private Use

Important Note: This is the default function and is already pre-programmed in new locks. This is the most common function and is used where the same code will be repeatedly used.

B) Public Use

The user enters their own personal four-digit code. This locks the lock. The same code is entered once only to open the lock before being erased and ready for the next new user. This function is used for short term, multi occupancy applications, e.g. a locker in a leisure centre.

CODE LEVELS

Master Code

- Open the lock
- Change the Master Code
- Set / Change / Delete the Sub-Master and User Code
- Select between Private and public functions
- Activate / deactivate Technician Codes

Sub-Master Code

- Open the lock
- Change the Sub-Master Code
- Set / Change / Delete the User Code

User Code

- Open the lock
- Change the User Code


Technician Code

- Open the lock


BUTTON INFORMATION

Note


The KitLock has a 10 button keypad and a # button. The # button is hidden beneath the handle when in the locked position.



Locked

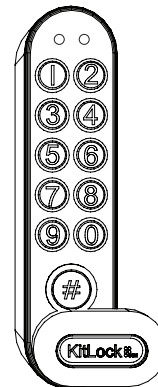

Unlocked



- Red= Code Rejected / Low Battery
- Blue= Code Accepted

INFORMATION

Penalty Time

- Entering three incorrect codes will cause the lock to shutdown for 10 seconds.

Battery Power

- The KitLock should provide well in excess of 50,000 openings, of 4 seconds each from 2xAAA 1.5v cells.

Low Battery

- When the battery power is low the Red LED light will flash three times before the Blue LED Light illuminates.
- Fit new batteries as soon as this happens. The lock will operate for 100 times with a low battery.

Battery Failure Override

- The KitLock has been designed so an external PP3 battery can be placed against the contact points surrounding the Blue and Red LED's so the lock can be opened to replace the batteries should they fail.

Battery Failure Instructions

- Place the contact points of the PP3 battery against the contact points surrounding the Blue and Red LED's.
- The positive + PP3 terminal against the Red LED contact point and the negative - PP3 terminal against the Blue LED.
- Enter the Master Code.
- The motor will withdraw the locking pin allowing the lock to be opened.
- Fit new batteries by removing the upper fixing bolt and swinging the lock down over the edge of the door.
- Refit the lock.

Programming

- The lock must be in the open position with the # button visible.
- Every program command must commence by pressing the # button, followed by either the Master Code, Sub-Master Code or User Code.

MASTER CODE COMMANDS

Changing the Master Code

- #Master Code (ex. #11335577)
- 01
- New Master Code (ex. 12345678)
- New Master Code (ex. 12345678)
RESULT: Changed Master Code to 12345678

Set or Change the User Code

- #Master Code (ex. #11335577)
- 02
- User Code (ex. 9999)
RESULT: Changed User Code to 9999

Delete the User Code

- #Master Code (ex. #11335577)
- 03
RESULT: User Code deleted

Set or Change the Sub-Master Code

- #Master Code (ex. #11335577)
- 04
- Sub-Master Code (ex. 87654321)
- Sub-Master Code (ex. 87654321)
RESULT: Sub-Master Code 87654321 now operative

Delete the Sub-Master Code

- #Master Code (ex. #11335577)
- 05
- RESULT: Sub-Master Code deleted

SUB-MASTER CODE COMMANDS

Changing the Sub-Master Code

- #Sub-Master Code (ex. #87654321)
- 06
- New Sub-Master Code (ex. 22446688)
- New Sub-Master Code (ex. 22446688)
RESULT: Changed Sub-Master Code to 22446688

Set or Change the User Code

- #Sub-Master Code (ex. #87654321)
- 07
- User Code (ex. 9999)
RESULT: Changed User Code to 9999

Delete User Code

- #Sub-Master Code (ex. #87654321)
- 08
RESULT: User Code deleted

USER CODE COMMANDS

Changing the User Code

- #User Code (ex. #2244)
- New User Code (ex. 1234)
- New User Code (ex. 1234)
RESULT: Changed User Code to 1234

SPECIAL MASTER CODE COMMANDS

Set A) Private Use

- #Master Code (ex. #11335577)
- 26
RESULT: The lock will revert back to default function A) Private Use Function. Factory set User Code 2244 will now work repeatedly until reprogrammed.

Set B) Public Use - Single Code Entry (default)

- #Master Code (ex. #11335577)
- 24
RESULT: The lock will now remain open until the next user enters their own personal code:
- Step 1: Enter a 4 digit code & close the locker which will now be locked.
- Step 2: Enter the same 4 digit code. The lock will now open and remain open until the next 4 digit code is entered.

Set B) Public Use - Double Code Entry

- #Master Code (ex. #11335577)
- 22
RESULT: The lock will now remain open until the next user enters their own personal code:
- Step 1: Enter a 4 digit code & close the locker which will now be locked.
- Step 2: Enter the same 4 digit code. The lock will now open and remain open until the next 4 digit code is entered.
- Note: When locked in this mode the Red LED will flash every 5 seconds to indicate the locker is locked.

TECHNICIAN CODE COMMANDS

Set Technician Code

- #Master Code (ex. #11335577)
- 99
- Technician Code (ex. 123456)
- Technician Code (ex. 123456)
RESULT: The lock is automatically set into B) Public Use Function and allows the programmed Technician Code to open the lock WITHOUT the entered single use code being erased.
Note: If lock is opened with a Master Code the User Code will be erased.